List of Warning/Indicator Lights



(U.S.A.)



Brake system warning light (Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction



(Canada)

indicator lamp



SRS warning light



(U.S.A.)

ABS warning light



(Canada)



Electric power steering system warning light



ously on)

Tire pressure warning light



Slip indicator

Have the malfunction repaired immediately.



Open door warning light



Front passenger's seat belt (On the center panel)



Low fuel level warning light



Tire pressure warning light*1




cluster)

Driver's seat belt reminder light



Master warning light

For further information, refer to the Owner's Manual.

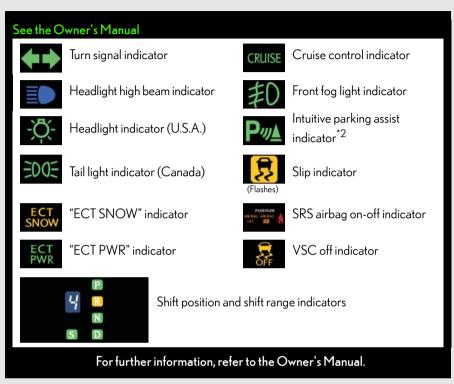

- *1: Turns on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature including the spare tire. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.
- *2: If equipped

What to do if ...



If the electronic key does not operate properly

■ Unlocking and locking the doors





To unlock or lock the vehicle, use the mechanical key to remove the lock cover on the driver's door handle. The mechanical key is stored inside the electronic key.

- 1 Unlocks
- 2 Locks

■ Starting the engine





- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.
- 3 Press the "ENGINE START STOP" switch within 10 seconds of the buzzer, keeping the brake pedal depressed.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

If the engine doesn't start

Make sure that the correct operating procedures have been followed.



Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine. $(\rightarrow P.14)$



Steering wheel lock

Make sure that the steering wheel lock is released.

To release the steering wheel lock, gently turn the wheel left or right while pressing the "ENGINE START STOP" switch. $(\rightarrow P.10)$

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds	Tried to lock the doors using the entry function while the electronic key is still inside the passenger compartment Closed the trunk while the	Retrieve the electronic key from the passenger compartment and lock the doors again. Retrieve the electronic key
	electronic key is still inside and all doors are locked	from the trunk and close the trunk lid.
Exterior alarm sounds once for 60 seconds	Tried to exit the vehicle with the electronic key and lock the doors without first turning the "ENGINE START STOP" switch OFF	Turn the "ENGINE START STOP" switch OFF and lock the doors again.
Exterior alarm sounds once for 10 seconds	Tried to lock the vehicle using the entry function while a door is open	Close all of the doors and lock the doors again.
Interior alarm sounds continuously	Tried to open the door and exit the vehicle without shifting the shift lever to P	Shift the shift lever to P.
Interior alarm pings continuously	Switched to ACCES- SORY mode while the driver's door is open (Opened the driver's door when the "ENGINE START STOP" switch is in ACCESSORY mode.)	Close the driver's door.
	Turned the "ENGINE START STOP" switch OFF while the driver's door is open	Close the driver's door.